

## Specifications

Model 1209

Weighs in grams (g) or pounds and ounces (lb oz)

Capacity: 5,000g (5kg) or 11lbs

Graduation: 1g or 1/8 oz

Uses Strain Gauge technology, which is an electrical resistance or 'strain' measured by a steel bar within the scale, being depressed by the weight of the food on the scale. This 'strain' is then converted to a digital weight readout.

Bowl: 3 Litre capacity. Dishwasher-safe, but not suitable for use in the microwave

Automatic zero setting

Automatic switch off

Overload indicator 'E'

Low battery indicator

Tare Function

Electronic 99 minute, countdown timer with alarm

Battery: 1 x CR2032 Lithium battery

## Battery Warning

### **BATTERY WARNING:**

#### **INTERNAL BURNS / CHOKING HAZARD**

Swallowing batteries may lead to serious injury or death (severe burns can occur within 2 hours).

#### **IMMEDIATELY SEE A DOCTOR**

#### **Emergency Telephone Numbers**

AUSTRALIA 000 NEW ZEALAND 111

#### **Poisons Information Centre**

AUSTRALIA 13 1126 NEW ZEALAND 0800 764 766

#### **KEEP BATTERIES OUT OF REACH OF CHILDREN**

*Dispose of batteries immediately and responsibly*

- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Remove exhausted batteries from the product.
- Remove batteries from the battery compartment when not in use.
- Never throw batteries in a fire or attempt to open up their outer casing.

Made in China for  
**Proper Housewares**  
A division of  
SUPERTEX INDUSTRIES PTY LTD  
- a wholly-owned Australian company  
ABN 85 003 833 029

For further information -

website: [www.supertex.com.au](http://www.supertex.com.au)

Email: [customerservice@supertex.com.au](mailto:customerservice@supertex.com.au)

Telephone: (02) 8756 3000

Facsimile: (02) 9748 6622



A signatory to the  
Australian Packaging Covenant

N2853



V3.1404

**proper<sup>®</sup>**

5kg digital  
bowl scale  
with  
countdown  
timer

*In your home since 1920*

Model 1209

Name: Bowl Scale



## Operating Instructions


## INSTRUCTIONS FOR USE

For the correct and proper use of the scale, please read the instructions carefully before operating.

**Note:** The insulator tab found underneath the battery in the battery compartment must first be removed for the scale to function.



### Weighing

1. Place the scale on a hard, level surface. If you intend using a bowl, place it on the platform first before turning the scale on.
2. Press the 'ON/TIMER' button to enter weighing mode. The scale is ready for use when '0' appears.
3. The scale displays in grams (g) or pounds (lb). To select/change the unit measure, press the 'Unit/Up Arrow' button. 
4. Put the item to be weighed in the bowl or on the platform - the weight will appear on the display
5. If no further weighing is carried out within the next half minute, the scale automatically turns off.

### To use the Tare function

This scale allows the separate weighing of items as each item is added to the scale. No need to empty your bowl.

After weighing the first item, press the 'TARE' button to reset the display to zero.

With the first item still on the platform or in a bowl or container, add the second item. The

readout will now show the weight of the second item only. Repeat these steps if you have additional items to weigh. The total combined weight of the items must not exceed the capacity of the scale, which is 5000g / 11lb.

The total weight of the items on the scale, (including the container or bowl if using one), can be retrieved by pressing the 'TARE' button again and then removing all items off the scale. The total weight will be displayed as a negative number.

### Countdown timer setting

1. Press the 'ON/TIMER' button to enter weighing mode. The scale is ready for use when '0' appears.
2. To set the countdown timer, press 'ON/-TIMER' once again. You are in 'countdown setting' mode when '00:00' is displayed.
3. Press the up or down arrows to set the number of minutes required. Maximum time span: 99 minutes only.
4. Once done, press the 'ON/TIMER' button again to move from 'minutes' to 'seconds'. Use the up or down arrows to set the number of seconds required.
5. When this is done, press 'ON/TIMER' once again to activate countdown.
6. The alarm sounds off when countdown reaches zero. To silence the alarm, press the 'ON/TIMER' button.
7. You may resume weighing whilst countdown is taking place, by pressing 'ON/TIMER' again. This will take you back to weighing mode.

*Note that once countdown time has been set, you cannot change it.  
If necessary, remove the battery momentarily and re-install. Then reset the Timer.*

### Overloading


When the scale is overloaded (+5000g/11lbs), the display will read 'E'. Remove the weight immediately or damage to the scale may occur.

### Low battery indicator

'Lo' appears on the readout indicating the battery needs to be replaced. Always use a good quality, fresh Lithium battery.

### How to remove and insert the battery

1. Turn the scale upside down and slide the battery compartment cover open.
2. After removing the spent battery, insert 1 fresh, new CR2032 lithium battery with the '+' side facing up. Then securely replace the compartment cover.

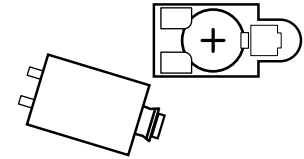

### Caring for your Scale

**The 3L capacity bowl is not suitable for use in the microwave oven.**

To clean it, place in the dishwasher or handwash in warm soapy water. Then rinse and dry thoroughly.

Clean the scale with a damp, soft cloth using a mild detergent or non-abrasive household cleaner. Do not allow water to get inside the scale as this could damage the electronics.

Remove the battery if the scale is not being used for a long period of time.